RTK-RDMQUICK START GUIDE www.9ci.ca

MATERIALS

ASSEMBLY

Step 1: Remove Items from Case (5) and check inventory

Step 4: Place 2 on roof of car



Step 5: Power on 2 by plugging in to USB power supply. Solid blue light = on



Step 6: Wait for flashing blue light on 2



Step 7: Use RAM mount to attach 3 to RDM




Step 8: Connect 3 to RDM tablet and wait for flashing blue light AND flashing or solid green light



Step 9: Proceed to COM Port Setup on reverse side of Quick Start Guide



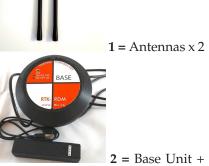

Power Supply



RAM arm



4 = Tripod

Step 2: Attach Antennas (1) to Base (2) and Rover (3)



Step 3: Connect 2 to Tripod (4)








RTK-RDMQUICKSTARTGUIDE www.9ci.ca

COM PORT SETUP

If tablet does not connect to the been assigned to the GPS. GPS automatically, press windows key and type run, then press enter. Type **devmgmt.msc** and press **enter**.

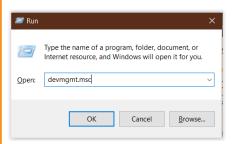

File	Act	tion View Help
(+ +)	₽.	
>	0	Bluetooth
	۲	Cameras
		Computer
	-	Disk drives
		Display adapters
		DVD/CD-ROM drives
		Firmware
	1	Human Interface Devices
	ь,	I Intel(R) Dynamic Platform and Thermal Framework
		Keyboards
	0	Mice and other pointing devices
		Monitors
	2	Network adapters
	₽	Other devices
		Portable Devices
~	÷	Ports (COM & LPT)
		💭 u-blax GNSS Receiver (CDM14)
	8	I Print queues
		Processors
		Security devices
		Sensors
		Software devices
		Sound, video and game controllers
		Storage controllers
	t,	System devices
	. A.	Universal Carial Bure controllare

Expand PORTS (COM&LPT) and check what COM port number has

Consult RDM documentation on selecting the correct GPS COM port in RDM software.

MOUNTING

Place Base on vehicle roof at the center for best GPS performance.



Mount Rover onto RDM using RAM mount. Set top of Rover parallel to the ground and unobstructed.



SPECIFICATIONS

- GPS Receiver
 - RTK based system
 - 2.5cm accuracy
 - Self-survey-in
- System Power
 - Base Power -USB (battery)
 - Rover Power -USB (tablet)
- RTK Radio
 - 915 MHz radio
 - Range 2km
- Mechanical
 - 6" dia, 4" ht
 - RAM mount
- Environmental
 - -10C to +60C
 - IP52

CONTACT

Web www.9ci.ca Email info@9ci.ca Phone +1 (208) 810-1733

FAOS

- How do I connect to the tablet? Simply connect Rover USB to the tablet.
- Why am I not getting an RTK fix? Check that the Base and Rover antennas are both connected.
- Why won't the Base power on / stay on? Check that the USB battery bank for the Base is charged.
- How can I get coordinates of the GPS? Use the RDM software GPS menu to display coordinates.
- Why won't the green light go solid? Limited GPS signal may prevent ideal RTK fix. Flashing green is still a good RTK fix.